SONY



Don't Talk While You Are Recording. Hearing instructions or parts of a conversation detracts from your video. Remember, the mic is on the camcorder which means your voice will drown out environment sounds.





Create A Travelogue. Write down the date, time of day and where you're shooting so you can put together a storyline later when editing your video. Some camcorders feature a built-in GPS receiver that automatically tags your current location and date while you're shooting.



Consider Dramatic Low-Light Shots. Play with your camcorder's settings before your trip so you're not afraid to shoot twilight and sunset shots. Some camcorders feature technologies that ensure crisp images even in low light.



Be Prepared. Always have charged batteries and extra memory card or blank media for your camcorder ready to go.

SONY


SONY





Cup your hands around your camcorder to compensate for camera shake. Some camcorders have a stabilizing feature that keeps your shots smooth.



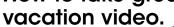



For more great tips visit **sony.com/howdini**For great offers and to learn more about
Handycam® cameras visit **sony.com/handycam**

© 2009 Sony Electronics Inc. All rights reserved. Reproduction in whole or in part without written permission is prohibited. Sony, Handycam and the Sony logo are trademarks of Sony.




Instructions:

This PDF is designed to fit in your camera carrying case. Simply print it out, then trim and fold along the lines to create your very own handy reference guide.



Step 1: Cut out around outline

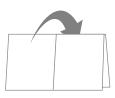

Step 2: Fold top half back



Step 3: Fold left side back